


# TINY HAWK II

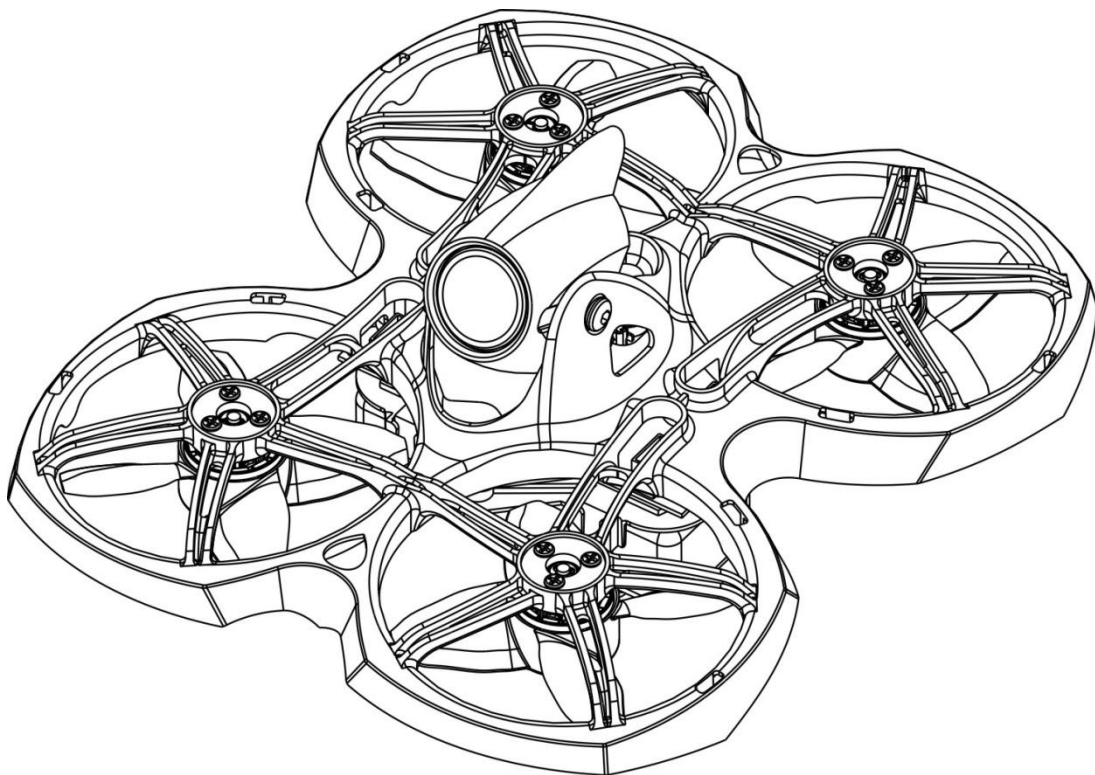

Thanks for purchasing the Tinyhawk II. Designed in California, assembled in China.

## Disclaimer

Please read the disclaimer carefully before using this product. By using this product, you hereby agree to this disclaimer and signify that you have read them carefully and completely. This product is not suitable for people under the age of 18. Adult supervision is highly recommended for kids under the age of 18.

Our Tinyhawk II features open-source flight controller and Electronic Speed Controllers to meet the FPV enthusiasts' need to upgrade their quad.

Please read the instruction manual and warnings carefully. Before every flight, make sure the battery is fully charged and power connections are secure. DO NOT fly around crowds, children, animals or objects. EMAX ACCEPTS NO LIABILITY FOR DAMAGE(S) OR INJURIES INCURRED DIRECTLY OR INDIRECTLY FROM THE USE OF THIS PRODUCT.

## Precautions

Please follow the instructions to assemble and to operate this product in a proper way.

Pilots do not use this product if you have physical or mental illness, dizziness, fatigued, or use while under the influence of alcohol or drugs.

Please fly in a safe area away from people

Do not modify or use other parts and accessories not approved for the use of EMAX.

Do not use this product in harsh environments (such as winds, rain, lightning, snow, etc.).

Do not use this product in a strong electromagnetic environment.

## Support

Please visit [emax-usa.com](http://emax-usa.com) or [emaxmodel.com](http://emaxmodel.com) for any updates or support needs.

# Table of Contents

|  |    |
|--|----|
| Disclaimer.....  | 1  |
| Precautions.....   | 1  |
| Support.....   | 1  |
| Product specification.....                                 | 1  |
| Tinyhawk II.....   | 1  |
| Parameter.....   | 1  |
| Product list.....  | 1  |
| Tinyhawk II Structure.....                                 | 2  |
| Tinyhawk II.....   | 2  |
| Propeller Direction and Mounting.....                      | 2  |
| Propeller Dismount.....                                    | 3  |
| Tinyhawk II VTX Settings.....                              | 3  |
| VTX Channel Settings with the Button.....                  | 4  |
| Changing VTX setting via Betaflight OSD.....               | 5  |
| <u>Tinyhawk II All-in-One Flight Controller</u> .....      | 7  |
| <u>Emax On-Board Receiver</u> .....                        | 7  |
| Binding Procedure.....                                     | 7  |
| <u>Emax Tinyhawk II Flight Controller (FC)</u> .....       | 8  |
| Stock Flight Controller Settings.....                      | 8  |
| Adjusting Software Settings (Betaflight Configurator)..... | 8  |
| Reprogramming Tinyhawk II Flight Controller.....           | 9  |
| Flight.....  | 11 |
| Radio Stick Controls.....                                  | 11 |
| Left Stick Diagram.....                                    | 11 |
| Right Stick Diagram.....                                   | 11 |
| Fly Tinyhawk II.....                                       | 11 |
| Arming.....  | 12 |
| Flying Modes.....  | 12 |
| Line of Sight Flying.....                                  | 12 |
| First Person View (FPV) Flying.....                        | 12 |


# Product specification

| <b>Tinyhawk II</b>  | <b>Parameter</b>  |
|---|---|
| Diagonal wheelbase (without paddles)                      | 75mm  |
| Maximum size of the aircraft (without antenna, cable tie) | 110×96×42(mm)   |
| Aircraft weight (without battery)                         | 31g   |
| Motor   | TH0802 16000KV  |
| Propeller   | Avan TH Turtlemode Propeller  |
| Main Flight Controller                                    | F4 (MATEKF411RX firmware)<br>4 in one 5A ESC<br>SPI RX receiver (Compatible with Frsky remote control D8/D16 mode)    |
| Camera  | RunCam Nano 2 Camera  |
| Transmitter   | 0-25-100-200mW Adjustable frequency 37CH.<br>Support SmartAudio. Ham radio license required for use in North America. |
| LED   | Red   |
| Battery   | 1 Cell 450 mAh HV lipo battery  |

## Product list

1. Tinyhawk II × 1
2. Instruction manual × 1
3. Emax 1s HV 450 mAh × 1
4. Emax 2s HV 300 mAh × 1
5. Charger × 1
6. Extra Propeller Set (2x CW, 2x CCW)
7. Screwdriver x 1
8. Spare screws x 1
9. fc damper x 1
10. rubberbands x 1


## Tinyhawk II Structure

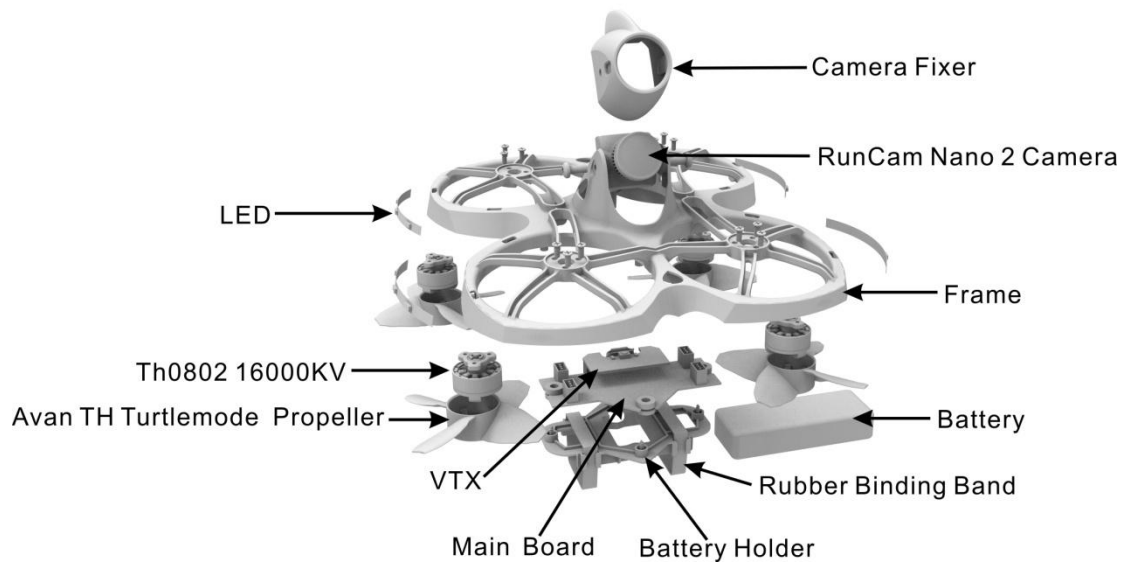

## Tinyhawk II

### Propeller Direction and Mounting

There are 2 spinning directions for Tinyhawk II propellers, Clockwise (CW) and Counter-Clockwise (CCW). When Buying a set of propellers, 2 CW and 2 CCW will be given. The blunt leading edge indicates the direction the propeller is suppose to rotate as compared to the sharp trailing edge. When mounting propellers please make sure the correct orientation shown in the diagram below.

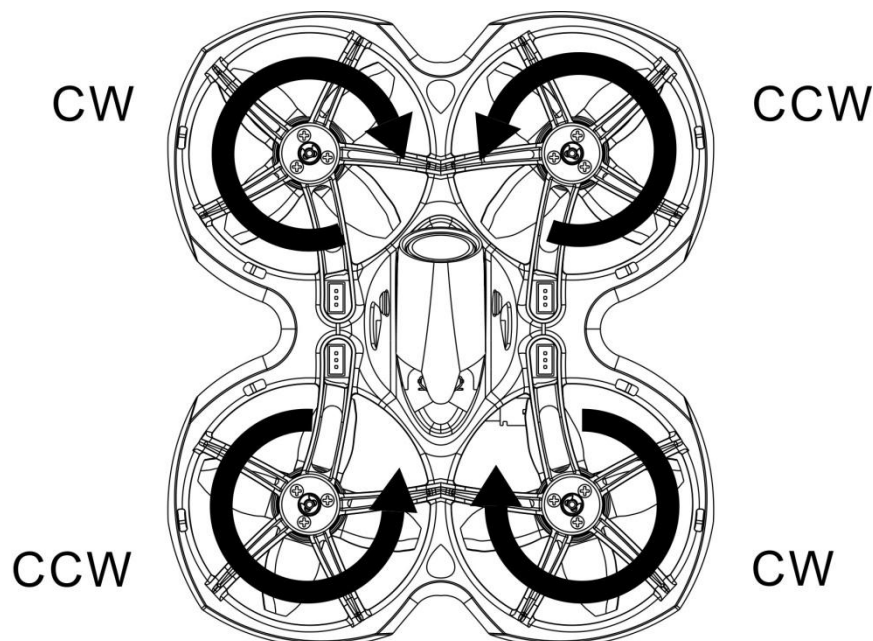

**Caution:** Failure to mount the propellers in the correct orientation will cause Tinyhawk II to not fly correctly and with no control. Please double check for the correct orientation.

1. Line up the 3 struts of the propeller with the 3 struts on the motor bell.

2. Press on the propeller while supporting the backside of the motor with our fingers.
3. Press on until the motor shaft is flush with the propeller.

**Caution:** Failure to support the motor sufficiently can cause the frame to break. Use caution when pressing the propellers on.

## Propeller Dismount


Use caution when dismounting the propellers. Only do so if completely necessary to change to a new propeller.

1. Use a small tool (such as a 1.5mm hex wrench or the small screwdriver provided) to press on the metal on the bottom of the motor and Tinyhawk II.
2. Press on the blades of the propeller with your fingers until the propellers pop off the motor.

**Caution:** Failure to support the motor sufficiently can cause the frame to break. Use caution when pressing the propellers off.

## Tinyhawk II VTX Settings


**NOTE:** You must “disable” VTX Smart AUDIO on UART 2 in order for push button VTX adjustment to work as described below.

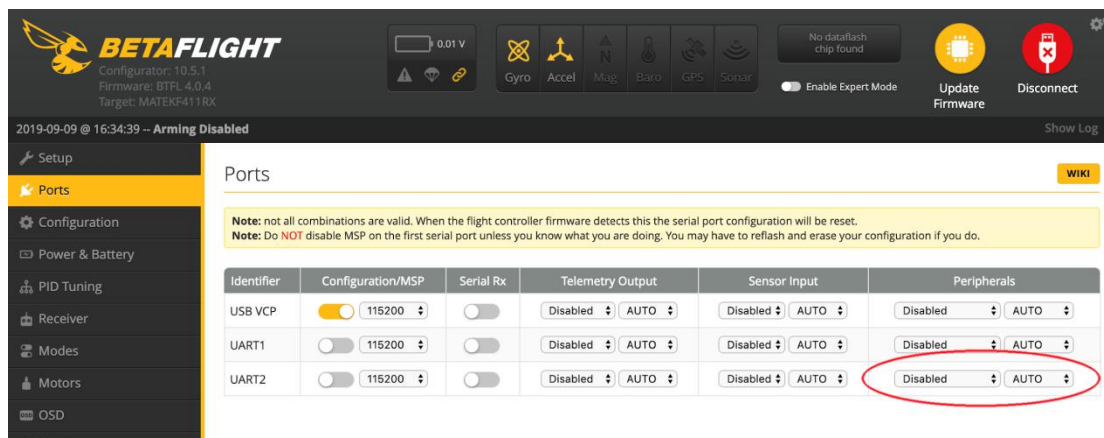

The screenshot shows the Betaflight configurator interface. The top bar includes the Betaflight logo, version information (Configurator: 10.5.1, Firmware: BFL 4.0.4, Target: MATEKF411RX), and various status indicators like voltage (0.01 V) and sensor status (Gyro, Accel, Mag, Baro, GPS, Sonar). The left sidebar shows navigation options: Setup, Ports (selected), Configuration, Power & Battery, PID Tuning, Receiver, Modes, Motors, and OSD. The main area displays the 'Ports' tab with a warning message: 'Note: not all combinations are valid. When the flight controller firmware detects this the serial port configuration will be reset. Note: Do NOT disable MSP on the first serial port unless you know what you are doing. You may have to reflash and erase your configuration if you do.' Below this is a table with columns: Identifier, Configuration/MSP, Serial Rx, Telemetry Output, Sensor Input, and Peripherals. The table lists three ports: USB VCP, UART1, and UART2. The 'Peripherals' column for UART2 is circled in red, showing 'Disabled' and 'AUTO' options.

| Identifier | Configuration/MSP                          | Serial Rx                | Telemetry Output | Sensor Input    | Peripherals     |
|------------|--|--------------------------|------------------|-----------------|-----------------|
| USB VCP    | <input checked="" type="checkbox"/> 115200 | <input type="checkbox"/> | Disabled   AUTO  | Disabled   AUTO | Disabled   AUTO |
| UART1      | <input type="checkbox"/> 115200            | <input type="checkbox"/> | Disabled   AUTO  | Disabled   AUTO | Disabled   AUTO |
| UART2      | <input type="checkbox"/> 115200            | <input type="checkbox"/> | Disabled   AUTO  | Disabled   AUTO | Disabled   AUTO |

### Vtx Schematic and Button Diagram

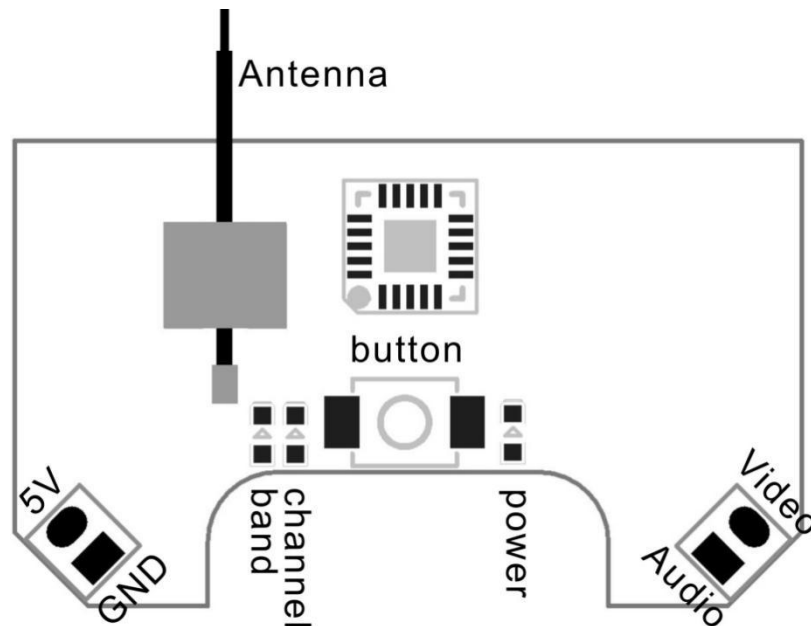

## VTX Channel Settings with the Button

### 1. Normal display

When powered on, the parameters of frequency group band, frequency point and power are displayed twice by LED cycle., then the LED is extinguished. To check frequency group band ,channel and power status click the button once quickly, and LED starts to indicate frequency band band , frequency channel and power. First indicate the frequency group band and then indicate the frequency channel, final indicative power. After all 2 rounds of LED display cycles, all LED will be off.

### 2. Menu Entry / Exit

- (1) Press the button and hold for 5s to enter the menu. After entering the menu, band LED lights up.
- (2) Press the button and hold for 5s again to save parameters and exit the menu. After saving and exiting the menu, all LED goes out.


### 3. Enter/Exit Band / Channel / Power option

- (1) After entering menu, short click button to switch frequency group band / frequency point / power, and the LED of the corresponding menu is lit.
- (2) Press the button and hold for 2s to enter frequency group band / channel / power option.
- (3) Press the button and hold for 2s again to exit frequency group band / channel / power option and return to the menu.

### 4. Band / Channel / Power parameter change

After entering frequency group band / channel / power option, short click button to change the parameter.

**Notice:** If you change to an illegal channel using SmartAudio, there will be no image transmitting from Tinyhawk II. To switch back to a legal channel, press the button on the vtx and follow the vtx menu guide shown below.

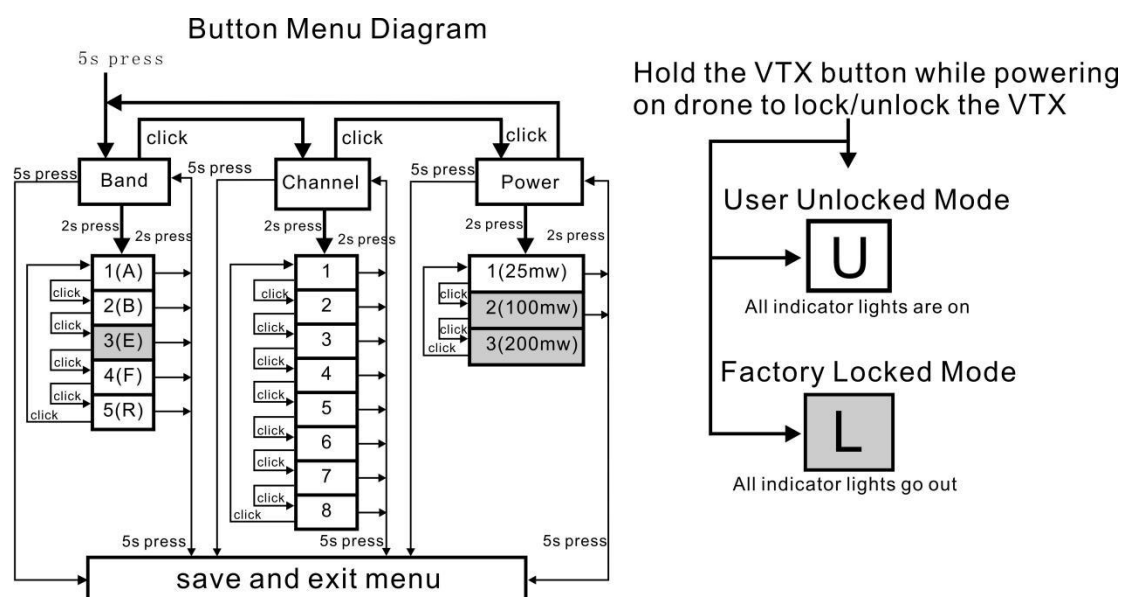

### Factory Locked Configuration ( $\leq 25\text{mW}$ Output)

| FR \ CH | CH1  | CH2  | CH3  | CH4  | CH5  | CH6  | CH7  | CH8  |     |
|---------|------|------|------|------|------|------|------|------|-----|
| A       | 5865 | 5845 | 5825 | 5805 | 5785 | 5765 | 5745 | —    | MHz |
| B       | 5733 | 5752 | 5771 | 5790 | 5809 | 5828 | 5847 | 5866 | MHz |
| E       | —    | —    | —    | —    | —    | —    | —    | —    | MHz |
| F       | 5740 | 5760 | 5780 | 5800 | 5820 | 5840 | 5860 | —    | MHz |
| R       | —    | —    | —    | 5769 | 5806 | 5843 | —    | —    | MHz |

FCC: Ham radio license required for use in North America.

EU/CE: Frequencies limited to prevent transmitting outside of designated CE frequencies.

### User Unlocked Configuration (Adjustable Output)

| FR \ CH | CH1  | CH2  | CH3  | CH4  | CH5  | CH6  | CH7  | CH8  |     |
|---------|------|------|------|------|------|------|------|------|-----|
| A       | 5865 | 5845 | 5825 | 5805 | 5785 | 5765 | 5745 | 5725 | MHz |
| B       | 5733 | 5752 | 5771 | 5790 | 5809 | 5828 | 5847 | 5866 | MHz |
| E       | 5705 | 5685 | 5665 | —    | 5885 | 5905 | —    | —    | MHz |
| F       | 5740 | 5760 | 5780 | 5800 | 5820 | 5840 | 5860 | 5880 | MHz |
| R       | 5658 | 5695 | 5732 | 5769 | 5806 | 5843 | 5880 | 5917 | MHz |

FCC: Ham radio license required for use in North America. E band Channels 4, 7, and 8 limited to prevent transmitting outside of designated amateur radio frequencies. Adjustable video output power only available on select models.

EU/CE: Do not use Use Unlocked Configuration.

\* By purchasing this product, the user is agreeing that he/she understands these responsibilities and will operate the equipment legally. EMAX cannot be held responsible for a user's actions purchasing and/or using this product in violation of the governmental regulations.

## Changing VTX setting via Betaflight OSD

Tinyhawk II is equipped with SmartAudio and is already configured with stock settings. The SmartAudio line is operated on UART 2 TX.



1. Power on Tinyhawk II, goggles, and Controller.
2. Follow the tips on screen to enter the main settings menu: THROTTLE MID+ YAW LEFT+ PITCH UP to enter OSD parameter adjustment menu. as shown in Figure 1.
3. In the menu interface, switching PITCH up/down to choose menu option. Move the cursor to "FEATURES" and stir Roll stick right to enter next menu. as shown in Figure 2. Using PITCH stick to move cursor to "VTX SA", as shown in Figure 3. Then pull ROLL stick right to enter VTX configuration menu, as shown in Figure 4.



Figure 1



Figure 2



Figure 3

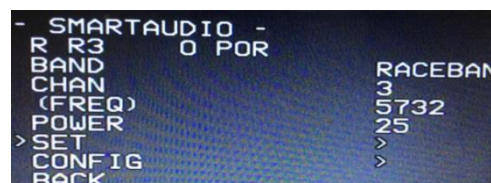


Figure 4

4. In the menu of VTX SA, we can configure the BAND, CHAN and POWER. Pulling the PITCH stick to move cursor up and down to choose VTX options that need setting. While pulling ROLL stick left and right to change the corresponding parameters. Once the parameters is set, moving the cursor to "SET", then turn ROLL stick right to enter "SET" and choose "YES" and turn ROLL stick right to save setting parameters, as shown in Figure 5.

5. In the menu of VTX SA, moving cursor to "CONFIG" to enter menu; While moving cursor to "PIT FMODE" and pulling ROLL stick right can turn off the VTX power, as shown in Figure 6.

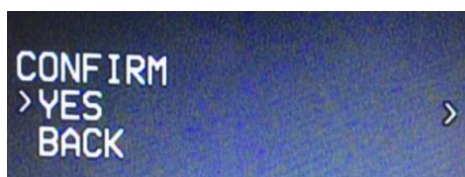


Figure 5


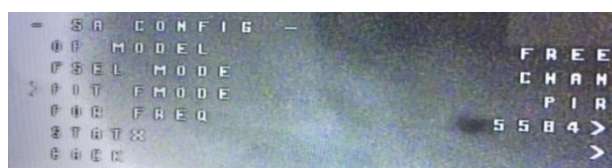


Figure 6

# Tinyhawk II All-in-One Flight Controller

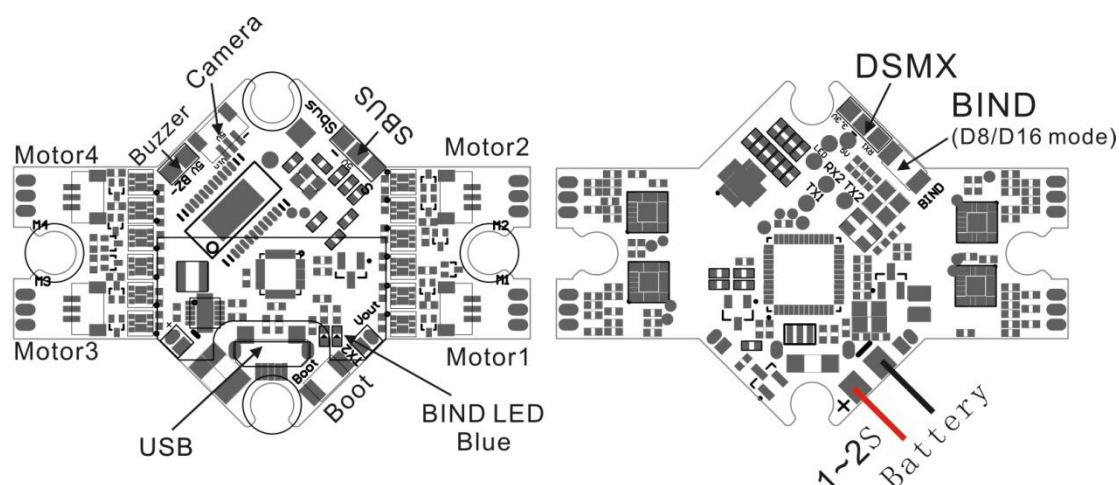


Tinyhawk II's main electronic board is shown above. This board contains a F4 flight controller with all 4 esc's and an 8CH receiver.

## Emax On-Board Receiver

The receiver is integrated into the main flight controller board and is set up via betaflight.

Number of Channels: 8CH

Compatibility: Receiver mode is SPI RX default protocol is FrSky\_D (D8).

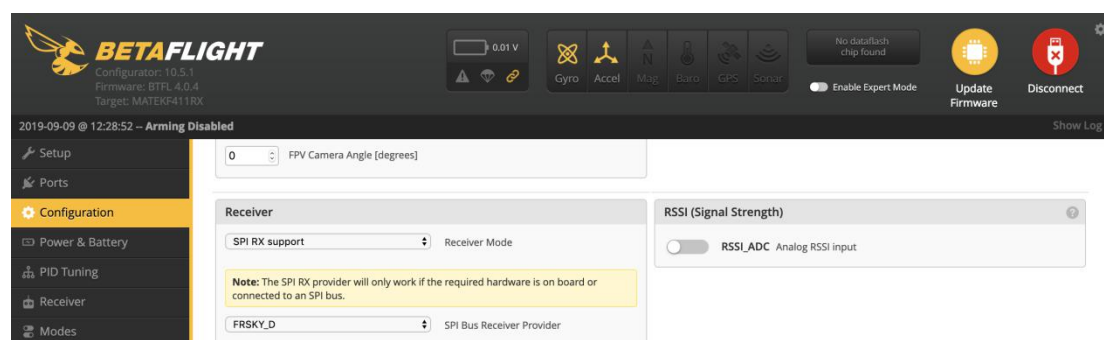

NOTE: It is also compatible with Frsky\_X (D16) but for best performance it is recommended to use Frsky\_D and set "Telemetry" OFF on your radio.

## Binding Procedure

Binding is the process of uniquely associating a receiver to a transmitter module. A transmitter module can be bound to multiple receivers (not to be used simultaneously). A receiver can only be bound to one transmitter module.

1. Hold the bind button for 2 seconds while the flight controller is already on. When the RED LED is flashing, it means the receiver is in BIND MODE
2. Turn on the transmitter, make sure it is set to D8 mode, and then set it into bind mode. When the BLUE LED on the flight controller starts flashing, it means bind successful.
3. Power cycle the flight controller and take your radio out of bind mode.

## Alternate Binding Method

It is possible to place the receiver into Bind Mode via the Betaflight configurator.

In the CLI tab type in this command: `bind_rx_spi`

Hit enter and your receiver should be in bind mode. Follow steps 2-3 from above to complete the binding process.

## **Emax Tinyhawk II Flight Controller (FC)**

This flight controller has a F4 MCU with a MPU6000 gyro. Tinyhawk II flight controller comes pre-programmed and properly tuned for optimal flight. For a full tune and configuration setting file (CLI dump file) please visit <https://emax-usa.com/> for the CLI dump file.

### **Stock Flight Controller Settings**

Tinyhawk II is configured to take a channel map of the TAER1234 convention. That is the channel map is in the respective order: throttle, aileron, elevator, rudder, AUX 1, AUX 2, AUX 3, and AUX 4. The arm switch on Tinyhawk II is set on AUX 1 and armed with the highest value. AUX 2 is configured for a 3 stage switch to select flight modes: Acro, Horizon, and Angle activating in an increasing order. AUX 3 is configured for the beeper. In a high state the motors will beep. AUX 4 is set to Flip Over After Crash mode (often referred to as turtle mode). Turtle mode is set when AUX 4 is in a high state. Please configure your radio as described above or change these settings in Betaflight Configurator.

### **PID profiles:**

PID profile 1 is tuned and optimized for Tinyhawk II with the provided Emax 1s HV 450 mAh battery for ultimate control of flight indoors and outdoors.

PID profile 2 is tuned and optimized for Tinyhawk II with the provided Emax 2s HV 300 mAh battery for ultimate control of flight indoors and outdoors.

Please do not change these values.

### **Rate Profiles:**

Profile 1 is designed for optimal indoor flight control with the Emax 1s HV 450 mAh Battery.

Profile 2 is similar to profile 1 but with a different throttle curve for use with 2s batteries.

Profile 3 is a more sensitive rate profile tuned for people who like to fly “pincher” style. These profiles can easily be switched in Betaflight OSD menu.


### **Adjusting Software Settings (Betaflight Configurator)**

Betaflight Configurator can be used to change programmed settings on Tinyhawk II and to flash new firmware if desired. Betaflight Configurator and flight controller firmware can be downloaded at <https://github.com/betaflight/>. The hardware target for Tinyhawk II Flight Controller is MatekF411RX.

**DISCLAIMER:** We do not suggest changing any PID settings on Tinyhawk II or upgrading the firmware to new versions. Tinyhawk II comes stock with an optimal tune for superior flight performance. Changing this can affect flight time, overall speed, control of the aircraft, and excessive heat within the motors.

## Reprogramming Tinyhawk II Flight Controller

1. Put the Flight Controller in DFU mode by pressing the BOOT button while plugging in the micro USB cable to a computer.
2. Select MATEKF411RX as the target and then select the firmware (4.0.0) or download the hex file from <https://emax-usa.com/> . Select Manual Baud Rate with 256000 in the drop down menu
3. Select Load Firmware(Online) to download the firmware or Load Firmware (Local) if already downloaded the hex file.
4. Select Flash Firmware to program the flight controller

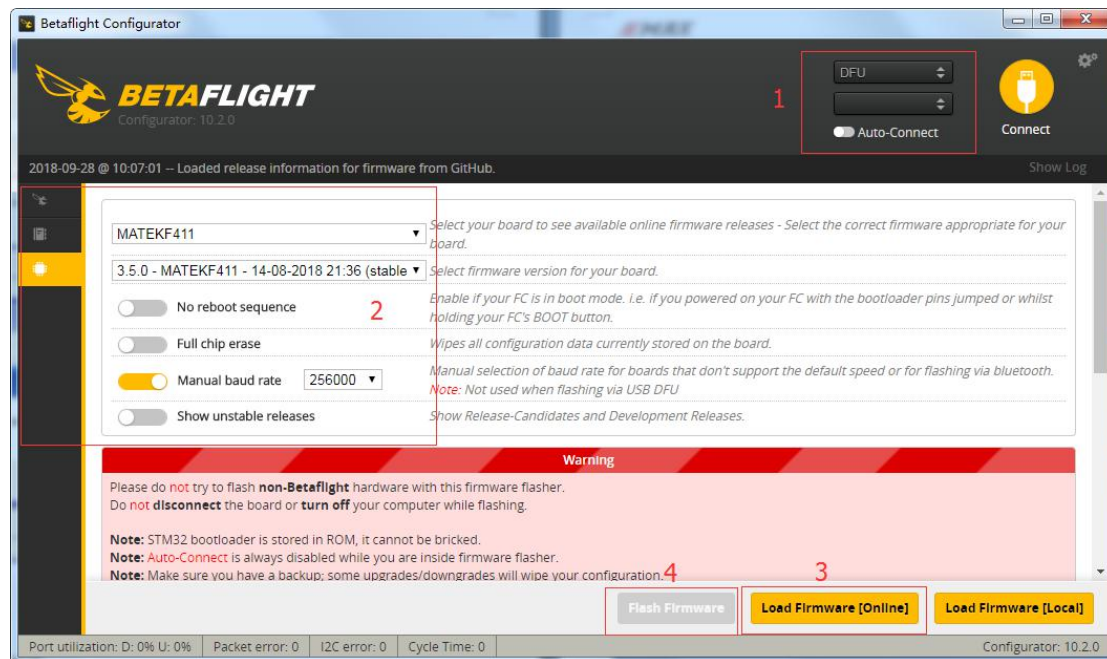

## Restoring the Tinyhawk default settings

1. Download the latest CLI Dump File from <https://emax-usa.com/>
2. Connect Tinyhawk II to Betaflight configurator and select the CLI tab
3. Open the CLI Dump File in a text editor and copy all the text.
4. Paste the settings into the command bar and press enter
5. Tinyhawk II will reconnect to Betaflight when completed

**BETAFLIGHT**  
Configurator: 10.4.0  
Firmware: BTFL 3.5.0 (Target: MK41)

0V  
Gyro Accel Baro I2C SPI UART

No dataflash chip found  
Enable Expert Mode  
Disconnect

2018-10-04 @ 16:30:41 - Board: **MK41**, version: **0**  
2018-10-04 @ 16:30:41 - Unique device ID: 0x2b003d3337510937313638  
2018-10-04 @ 16:30:41 - Craft name: Tinyhawk  
2018-10-04 @ 16:30:41 - Arming Disabled  
2018-10-04 @ 16:34:29 - CLI mode detected

Setup  
Ports  
Configuration  
Power & Battery  
PID Tuning  
Receiver  
Modes  
Motors  
OSD  
Blackbox  
**CLI**

Note: Leaving CLI tab or pressing Disconnect will **automatically** send "exit" to the board. With the latest firmware this will make the controller restart and unsaved changes will be lost.

```
$>
Enter CLI Mode, type 'exit' to return, or 'help'
```

Write your command here

Save to File


# Flight

Always use caution when flying and operate in an open and controllable area. Please learn the flight controls first before powering on the aircraft to fly.


## Radio Stick Controls

The left stick controls throttle and yaw direction of Tinyhawk II. The right stick controls pitch and roll of the aircraft.

### Left Stick Diagram

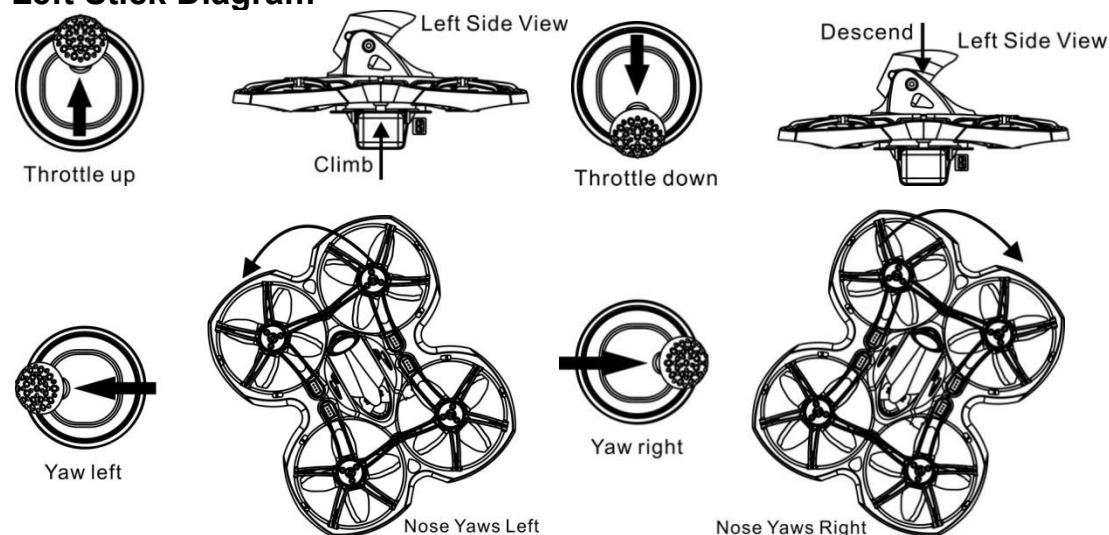

### Right Stick Diagram

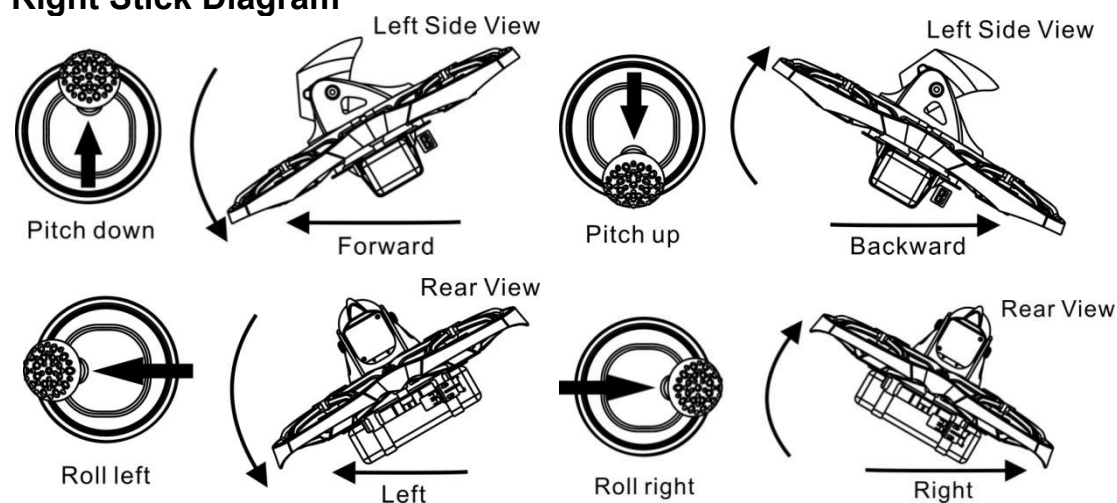


## Fly Tinyhawk II

Start by powering on your Radio and Goggles. Tinyhawk II comes already bound to your radio and on the right video channel matched with your goggles. Power on Tinyhawk II by sliding the battery into the battery tray and plugging it in. Once the battery is plugged in, set Tinyhawk II on a stable surface so it can calibrate.


Calibration takes a few seconds then Tinyhawk II is ready to fly. Tinyhawk II can fly for 4 minutes on a fully charged battery. Land Tinyhawk II when the battery reaches 3.2v; flying any longer can severely damage your battery and is not recommended.




1. Turn on Transmitter

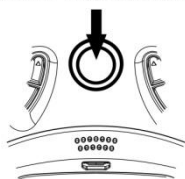

2. Install Battery

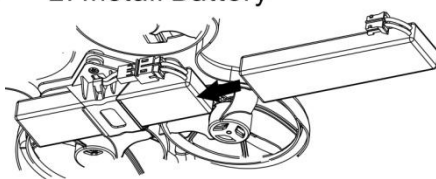


3. Connect Battery

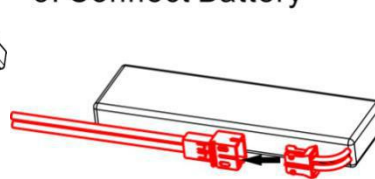


## Arming

Arming refers to setting Tinyhawk II to a fly ready state. When Tinyhawk II is powered on first it will not spin up the propellers until it is armed. Arm the aircraft by first moving throttle to the bottom position. Then move the left switch of the radio to its 3<sup>rd</sup> position upwards. You will see the propellers spinning when Tinyhawk II is successfully armed.

1. Throttle down

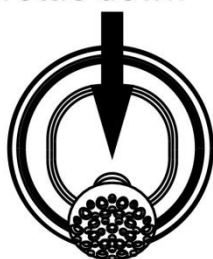

2. Switch to Arm Position

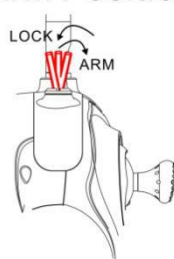

In the event of a crash always disarm immediately. Failure to disarm in a timely manner can damage Tinyhawk II.

Always disarm Tinyhawk II before handling it.

## Flying Modes

Tinyhawk II comes stock set in rate mode. This is an advance mode where control sets the angular rate of the aircraft. The AUX 2 switch is set to change this mode on a 3 stage switch. When AUX 2 is in a high state, Tinyhawk II will be in angle mode where control sets the attitude of the aircraft. When the switch is in the middle state, Tinyhawk II will be in Horizon mode.

## Line of Sight Flying

To learn how to fly Tinyhawk II start by flying it line of sight (no goggles yet). Power on Tinyhawk II and set it down in a cleared room. Arm Tinyhawk II then throttle up using the left stick to a hover position. Work on maintaining a constant altitude. Pitch and roll Tinyhawk II with the right thumb stick and yaw Tinyhawk II with the left thumb stick.

## First Person View (FPV) Flying

Make sure Tinyhawk II and the goggles are on the same vtx channel and that you have a clear area to fly around in. Apply the same principals learned when flying Tinyhawk II line of sight except now work on flying in a forward direction while maintaining a controlled constant altitude. It is easier to learn flying FPV by always moving in a forward direction so always apply a slight amount of pitch using your right thumb stick. You can steer Tinyhawk II like a car using yaw on the left thumb stick.

There is an on screen display (OSD) overlaying the video feed from the camera of Tinyhawk II. The OSD displays important information such as flight time and battery voltage. Pay attention to these numbers during flight to know how much battery life is

left. Tinyhawk II can fly for a maximum of 4 minutes. When the battery reaches 3.2v, land Tinyhawk II. Drawing the battery below 3.2v is not suggested and can damage the battery.

**Tips:** Work on maintaining a controlled altitude flight to begin while driving Tinyhawk II with pitch and yaw. Do not let the battery go lower than 3.2v. The arm switch activates a beeper when set in the 2<sup>nd</sup> position (middle); this is useful when looking for Tinyhawk II.

Thank you for purchasing our product! Enjoy Flying Tinyhawk II.



**Warning:**

Please pay attention to your surroundings.

Not recommended for persons under 18 years of age.